



Instructions for Lighting Stoves

1. The stoves should be attached to the propane tanks when they are delivered. If they are not, be sure there are no leaks after attaching the hose to the tank. Use soapy water to test for leaks.
2. Open valve on top of the propane tank
3. To light surface burners:
 - a. Hold lighted match to desired surface burner head
 - b. Push in and turn knob to the light position
 - c. Adjust knob to the desired flame size.
4. To light oven:
 - a. Light pilot light which is located at the rear of the broiler unit in the center under the oven unit. Be sure that the oven thermostat knob is in the off position before lighting the pilot.
 - b. After the pilot light is lit, turn oven thermostat knob to the desired temperature. Be aware that the oven may not light immediately.
5. When the surface burners and the oven are no longer needed, turn control knobs to the off position. Close the propane tank valve.

USE CAUTION AT ALL TIMES. IF THERE IS A PROPANE GAS LEAK, TURN OFF TANK IMMEDIATELY. DO NOT ALLOW GAS TO FLOW UNLESS IT IS FUELING A FLAME.